

USER MANUAL



M-COCO-2

IP/SDI colour corrector and legaliser



Contents

1	Introduction	4
2	Block Diagram	6
3	Hardware Installation	7
3.1	Rear module signal IO	7
4	I/O Configuration	8
4.1	Configuring the Ethernet Interfaces	8
4.2	Enabling Inputs & Outputs	9
4.3	Select I/O Protocol	10
4.4	Receiving an IP Flow	11
4.5	Transmitting an IP Flow	12
5	Status	14
5.1	Input Video status	14
	Video Status	14
5.2	Input Audio status	15
	Audio Status	15
5.3	Status Delay	15
5.4	Network Status & Statistics	16
	Flow Statistics	16
	Network In/Protect Network In pkts	17
6	Colour Correction and Legalising	18
6.1	Colour Correction	18
	Correction Enable	18
	Chroma & video gain	19
	YUV gain & lift	20
	RGB gain & lift	20

	Gamma	21
6.2	Legalising	22
	RGB Clip	22
	YC Clip	23
	Y Stretch	24
6.3	Colour Corrector Output Routing	25
7	References and Output Timing	26
7.1	References	26
	Status	26
	Reference configuration	27
	PTP Configuration	27
	PTP Statistics	28
7.2	Output timing	28
	Output Timing	28
7.3	Frame delay	29
8	Traffic Shaping Profile	30
8.1	Traffic Shaping Profiles	30
9	Input Format, Input Loss and Test Pattern Options	31
9.1	Input Format and On Loss of Input	31
9.2	Internal Test Patterns	32
9.3	Audio mute	32
10	Unicast Configuration	33
11	Basic Trouble Shooting	35
11.1	No input or output signals present	35
11.2	Errors in the IP flow's video content	35
11.3	IP flows keep stopping after a few minutes	35

12 Specification

36

Revision 1	Updated block diagram on page six. Added more information about internal test patterns to pages 29 and 36. Updated VIDEO LOSS CONTROLS wording on page 36.	21/05/20
Revision 2	Added VR07 relay bypass. EBU 103 and Constant hue modes added to Legalising section. Flow In and Out GUI grabs updated to show current layout of groupboxes	26/05/21
Revision 3	User interface screen shots updated to align with V2.3 MARBLE-V1 and V1.19 Vision 3 software releases. Added new audio monitoring and audio mute features. Added new preset features. Updated use of flow terminology.	21/06/22

1 Introduction

M-COCO-2 is a 10 bit 3G/HD/SD-SDI dual channel colour correction and legalising software app that runs on the MARBLE-V1 media processor – purpose-built GPU/CPU hardware that fits in the Vision frame. Featuring independent colour correctors and legalisers on each of the two outputs, digital image adjustments can be made in both the YUV and RGB domains, essential for maintaining colour fidelity.

Like all MARBLE-V1 video processing software apps, the M-COCO-2 can be used with IP (ST 2022 or ST 2110 video), with SDI or with both IP and SDI at the same time (thereby providing gateway functionality).

M-COCO-2:

- Dual channel colour corrector and legaliser app that runs on the MARBLE-V1 media processor
- Supports SDI and IP inputs and outputs
- Video gain adjustment
- Chroma gain and hue adjustment
- Y, U, V channel gain and lift adjustment
- R, G, B channel gain and lift adjustment
- R, G, B and all channel Gamma adjustment
- RGB and Y/C clipping with adjustable thresholds
- Y black and highlights stretch
- Horizontal and vertical wipe to show before/after processing
- Show RGB and Y/C clipped pixels


Common MARBLE-V1 feature set:

- Supports SMPTE ST 2022-6 and ST 2022-7 protocols and video within ST 2110 (supporting ST 2110-10, -20 and -21 standards)
- 10GbE SFP+ connectivity supporting 1310nm single-mode long range and 850nm multi-mode short range fibre
- Input and output present, black and frozen monitoring
- Input video and network error detection
- Input audio group monitoring
- IP inputs tolerant of any input packet distribution
- Instant clean switching between inputs, whatever their timing
- IP flow monitoring including packet loss, duplicated packets and packet delay variation
- Internal test patterns

- Sub frame output timing adjustment locked to chosen reference source
- Ten frames adjustable video output delay per output, in one frame increments
- Choice of multiple timing sources with fail-over: PTP and two analogue Black and Burst or tri-level syncs references via Vision frame
- Support for unicast and multicast transmission
- Full range of VLAN support
- Supports IGMP V1, V2 and V3
- Supports 31 video standards
- Flexible remote control and monitoring using frame integrated control panel, VisionPanel remote control panel, ASCII and JSON protocols, SNMP and the web browser-based VisionWeb Control
- Dual slot card allowing 10 cards in Vision 3 frame

2 Block Diagram

M-COCO-2

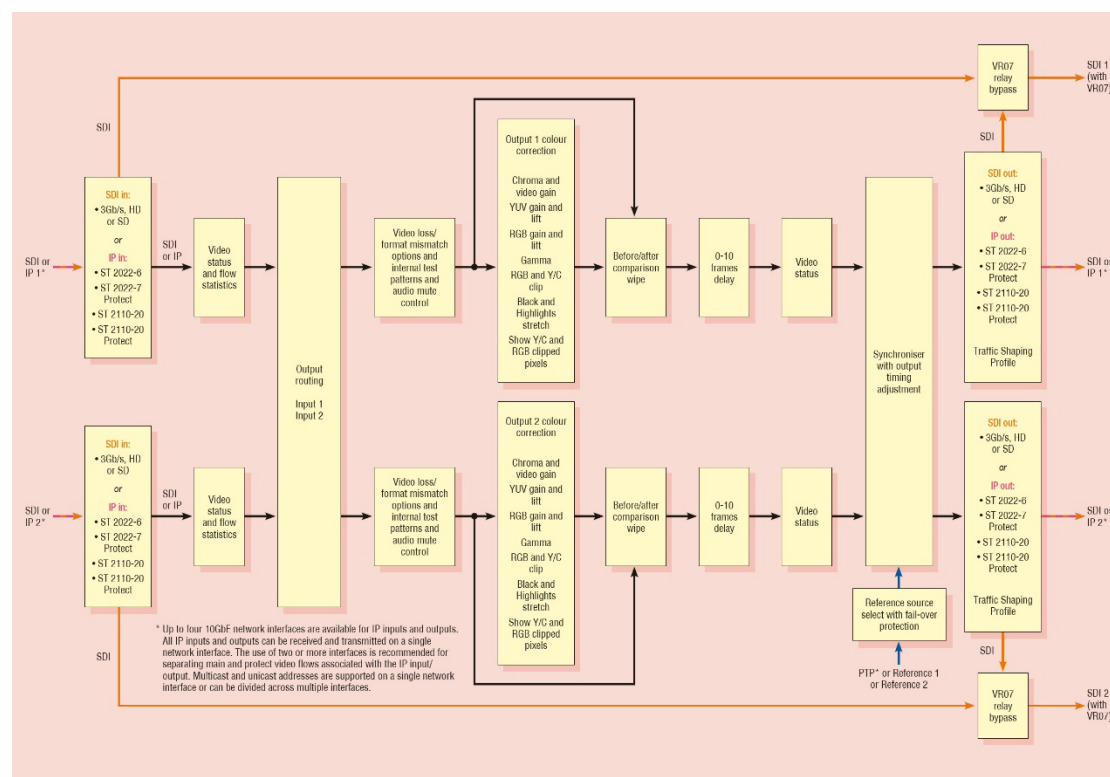

3 Hardware Installation

The potentiometers on the card are factory set and should not be adjusted. There are no user-selectable links.


The app based MARBLE-V1 cards are intended for use only in the Crystal Vision 'Vision' frame range and not in older style frames such as 'Indigo'.

Insert the card by pushing the white handle on the card edge, being careful to ensure the card is inside the guide rails. Remove it by pulling the metal hook. Do not force the card if resistance is met as the card may not be correctly aligned with the rear connectors.

Ensure that the Vision frame has the correct rear module fitted. Only the VR04, VR06 and VR07 rear modules offer the correct input/output functionality for the M-COCO-2 app.


The cards and rear modules can be inserted and removed without powering down the frame.

3.1 Rear module signal IO

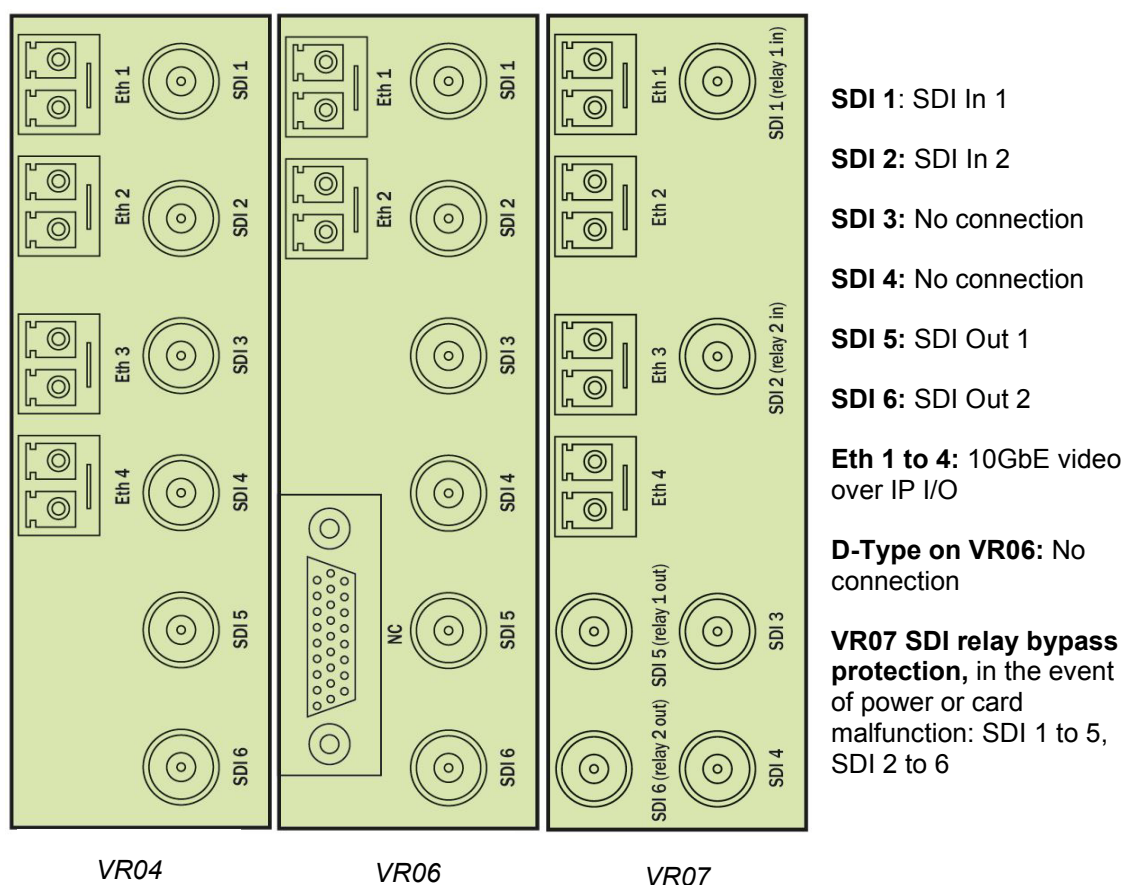

4 I/O Configuration

VisionWeb web browser control software is recommended for the configuration of the MARBLE-V1 software apps. This is achieved by entering the IP address of the frame into a web browser (10.0.0.201 on Ethernet port 1 of the frame by default). See the Vision 3 frame manual for more information on VisionWeb and frame configuration and operation.

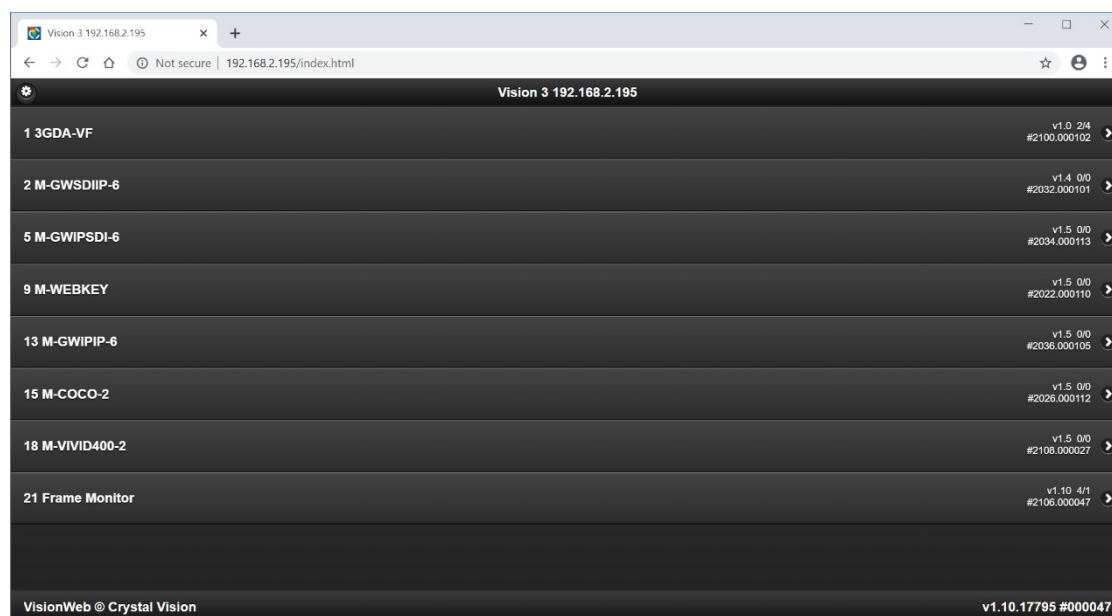

Example 'VisionWeb' homepage

4.1 Configuring the Ethernet Interfaces

MARBLE-V1 ST 2022 and ST 2110 video over IP flows are received and transmitted using the VR04/VR06/VR07 10GbE network interface connections. VR06 provides two network interfaces while the VR04 and VR07 provide four. A typical usage case is to use Eth 1 interface for the 'primary' IP traffic and Eth 2 for the 'protect'. The additional Eth 3 and 4 interfaces on the VR04 and VR07 allow input flows to be separated from output flows.

Within each Ethernet interface there are six virtual interfaces. These are useful for software apps which process six individual IP flows, such as the IP gateways, as each flow can be assigned to its own unique IP address. For the M-COCO-2 app, fewer connections will require configuration. If using SDI I/O with an analogue reference no virtual interfaces will need configuring.

If using IP I/O main and protect protocols, typically two virtual interfaces across two physical interfaces will require configuration. For example:

Eth 1:1 Primary IP Input 1

Eth 2:1 Protect IP Input 1

Eth 1:2 Primary IP Input 2

Eth 2:2 Protect IP Input 2


Eth 1:3 Primary IP Output 1

Eth 2:3 Protect IP Output 1

Eth 1:4 Primary IP Output 2


Eth 2:4 Protect IP Output 2

Alternatively if using the VR04 or VR07, the IP outputs can be separated onto Eth 3 and 4.

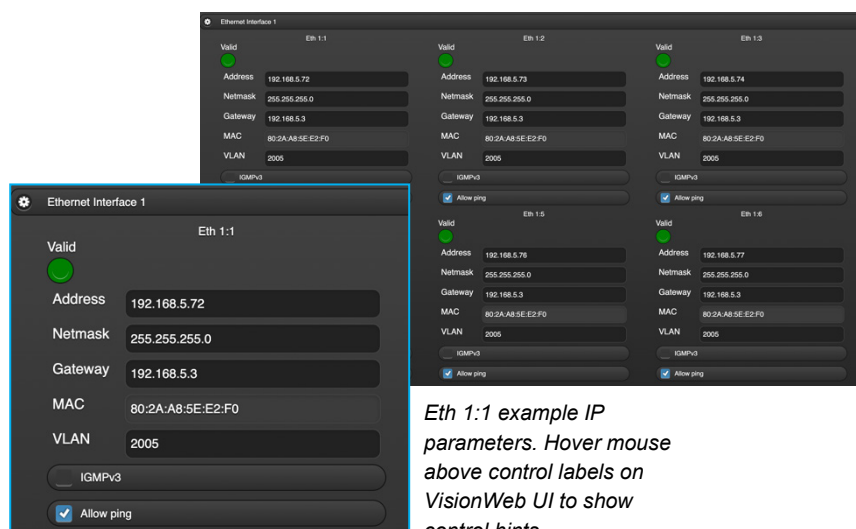


4.2 Enabling Inputs & Outputs

By default M-COCO-2 inputs and outputs are disabled. Use the Enable control within the Input and Output menus to enable them.

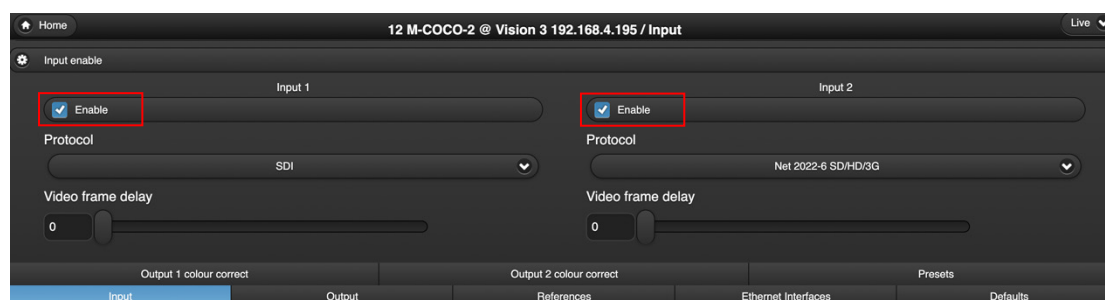

M-COCO-2 Input Enable

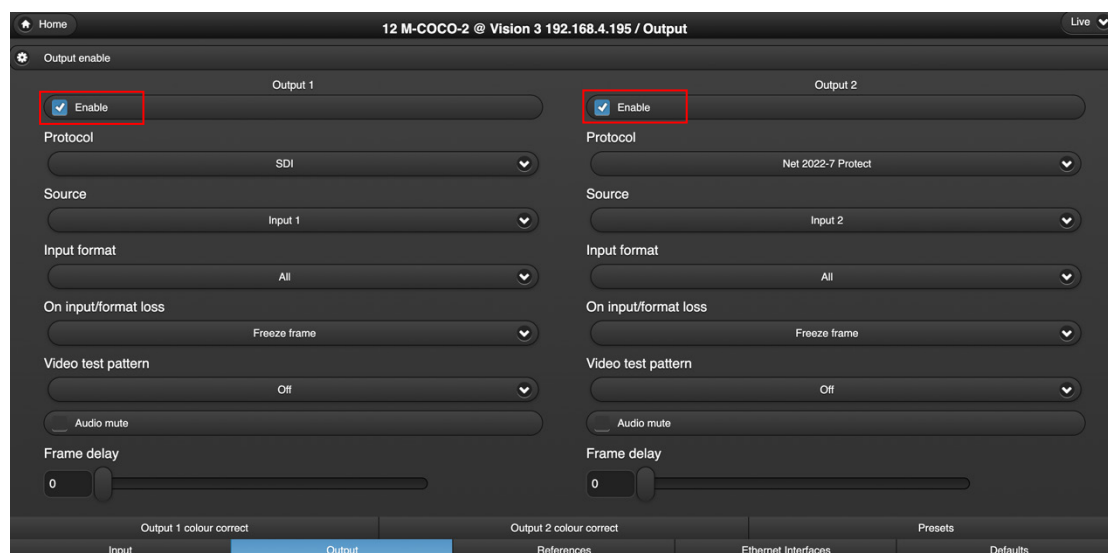


M-COCO-2 Output Enable

4.3 Select I/O Protocol

M-COCO-2 supports SDI and uncompressed video over IP protocols ST 2022 and ST 2110-20. It is possible to mix protocols between input and outputs. For example, an ST 2022 input can be output as SDI.

Once the inputs and outputs have been enabled, the required protocol can be selected using the drop down menus within the Input and Output control tabs. The protocol type will need selecting for each input and output.

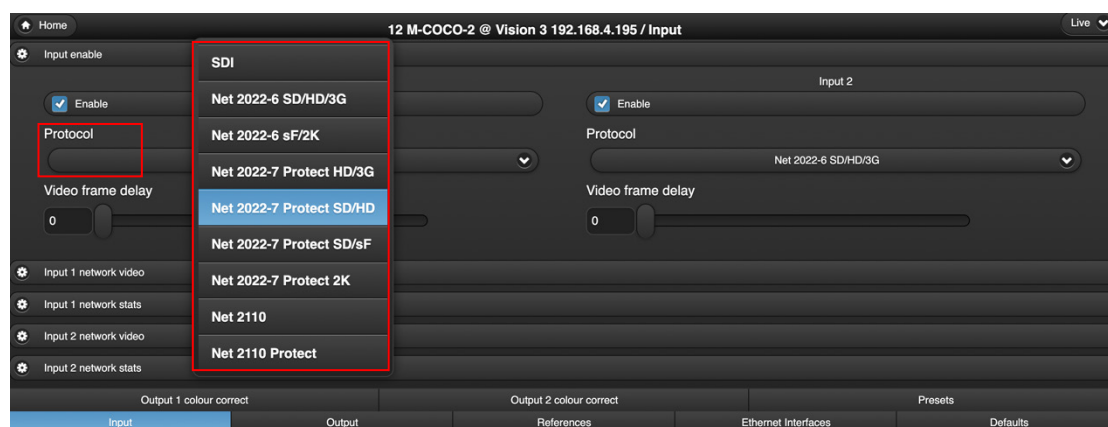

M-COCO-2 Input Protocol Selection

IP output flow transmission supports both Block Packing Mode (BPM) and General Packing Mode (GPM) for ST 2110-20 encapsulation. BPM, which packs multiple (up to 7) 180 byte blocks into an RTP payload, is a restricted subset of GPM, and GPM is the more general case.

4.4 Receiving an IP Flow

M-COCO-2 receives ST 2022 or ST 2110-20 video over IP flows using the 10GbE network interfaces on the VR04, VR06 or VR07 Vision frame rear connector. Typically Eth 1 is used for receiving and transmitting the 'primary' IP flows, with Eth 2 being used for the 'protect' in -7 protect applications.

The following example shows an M-COCO-2 configured to receive Input 1 using SMPTE ST 2022-7 protocol. When selecting ST 2022-7 it is necessary to configure both the 'Network In' and 'Protect Network In'.

The screenshot displays the configuration page for '12 M-COCO-2 @ Vision 3 192.168.4.195 / Input'. It is divided into sections for 'Input 1' and 'Input 2'. Under 'Input 1', the 'Protocol' is set to 'Net 2022-7 Protect SD/HD'. Below this, the 'Input 1 network video' section shows '2022, 2110-20 video' enabled. The 'Primary' network configuration for Input 1 shows 'Interface' as 'Eth 1:1' and 'Multicast address' as '225.5.0.1'. The 'Protect' network configuration for Input 1 shows 'Interface' as 'Eth 2:1' and 'Multicast address' as '226.6.0.1'. The bottom navigation bar includes 'Input', 'Output', 'References', 'Ethernet Interfaces', 'Presets', and 'Defaults'.

M-COCO-2 Input 1 IP Flow In

The controls highlighted in the above configuration show Input 1 of the M-COCO-2 set to receive the 'main' flow packets on Ethernet Interface 1:1 and 'protect' flow packets of the ST 2022-7 protocol on 2:1. In this example multicast IP addresses are in use.

To successfully receive an IP flow, all IP parameters must agree with those of the transmitter. If receiving ST 2110, the 2110 payload type and 2110 format will need to match the transmitter.

4.5 Transmitting an IP Flow

M-COCO-2 transmits ST 2022 or ST 2110-20 video over IP flows using the 10GbE network interfaces on the VR04, VR06 or VR07 Vision frame rear connector. Typically Eth 1 is used for receiving and transmitting the 'primary' IP flows, with Eth 2 being used for the 'protect' in -7 protect applications.

The following example shows an M-COCO-2 configured to transmit Output 1 using ST 2110-20 GPM Protect protocol. When selecting a protect protocol it is necessary to configure both the 'Network Out' and 'Protect Network Out'.

The first screenshot shows the 'Output enable' configuration for Output 1 and Output 2. For Output 1, the 'Enable' checkbox is checked, the 'Protocol' is set to 'Net 2110 Protect', the 'Source' is 'Input 1', the 'Input format' is 'All', the 'On input/format loss' action is 'Freeze frame', the 'Video test pattern' is 'Off', and the 'Audio mute' checkbox is checked. The 'Frame delay' is set to 0. For Output 2, the 'Enable' checkbox is checked, the 'Protocol' is 'Net 2022-7 Protect', the 'Source' is 'Input 2', the 'Input format' is 'All', the 'On input/format loss' action is 'Freeze frame', the 'Video test pattern' is 'Off', and the 'Audio mute' checkbox is checked. The 'Frame delay' is set to 0.

The second screenshot shows the 'Output 1 network source' and 'Output 1 network video' configuration. Under 'Output 1 network source', the 'Flow' is 'SSRC', the 'Interface' is 'Eth 1:3', the 'VLAN' is 2005, the 'Source address' is 192.168.5.74, the 'MAC' is 84:DE:3D:01:46:20, and the 'Source port' is 50011. Under 'Output 1 network video', the '2022, 2110-20 video' checkbox is checked, the '2110-20 payload type' is 100, the '2110-20 packing mode' is 'General', the 'Profile' is '2110TPNL Narrow linear', and the 'Burst rate limit' is 10. The 'Primary destination' is 'Enabled', the 'Destination address' is 225.5.0.30, the 'MAC' is 01:00:5E:05:00:1E, the 'Destination port' is 5030, the 'Time To Live' is 1, and the 'DSCP' is 0. The 'Protect destination' is 'Enabled', the 'Destination address' is 226.6.0.30, the 'MAC' is 01:00:5E:06:00:1E, the 'Destination port' is 7030, the 'Time To Live' is 1, and the 'DSCP' is 0.

M-COCO-2 Output 1 IP Flow Out

The controls highlighted in the above configuration show Output 1 of the M-COCO-2 routing Input 1 to Ethernet Interface 1:3 and 2:3 using ST 2110-20 Protect protocol with 'General

Packing Mode' (GPM). In this example, multicast destination addresses are being used for the main and protected flows which, if required, could be replaced by single point unicast addresses.


VLANs, ports and Time To Live (TTL) should be configured as per the network switch requirements.

If required a valid SSRC (Synchronisation source identifier) can be entered, otherwise left blank or set to 0 will accept all.

When transmitting ST 2110 the required payload type value should be set. The value for payload type is arbitrary and decided by the user. For example, value 100 could be used to indicate 1920x1080i 50Hz content and value 101 used to indicate 625i 50Hz content.

5 Status

5.1 Input Video status

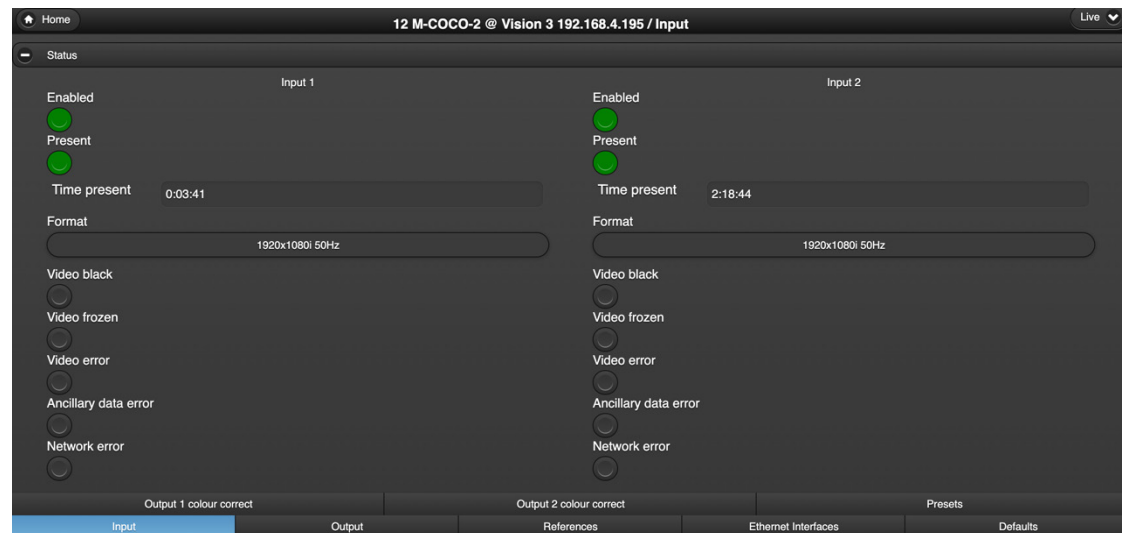

Input video status

Video Status

Enabled LED: Green when input is enabled, otherwise off

Present LED: Green when input is present, otherwise off

Time present: Length of time input has been present

Format: Read only text showing video format e.g. 1920x1080i 50Hz

Video black LED: Yellow if input is full frame black, otherwise off

Video frozen LED: Yellow if input is frozen, otherwise off

Video error LED: Red if CRC errors detected at input, otherwise off

Ancillary data error LED: Red if ANC data errors detected at input, otherwise off

Network error LED: Red if lost or duplicate packets are detected on primary or protect network input

5.2 Input Audio status



Input audio status

Audio Status

Audio Group 1 to 4 present LED: Green when audio groups present, otherwise off


Audio Channel 1 to 16 present LED: Green when audio channels present, otherwise off

Audio Group 1 to 16 silent LED: Yellow when audio channels silent (-93dBFS trigger point), otherwise off

The equivalent output status is also provided for video enabled, video present, video format, video black, video frozen, audio groups present, audio channels present and audio channels silent.


5.3 Status Delay

Audio silent, video black and video frozen status can be prevented from triggering until a user selectable delayed period between 1 to 120 seconds has expired. These controls are located within the 'Defaults' tab.

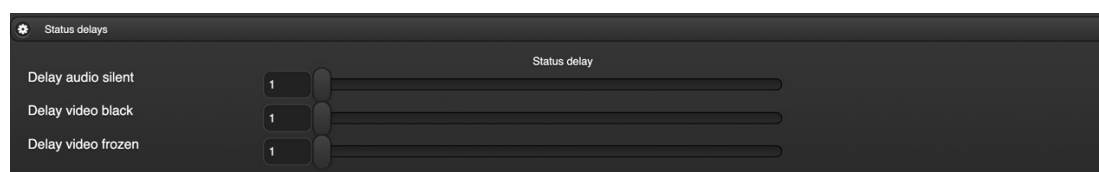

Status delay

5.4 Network Status & Statistics

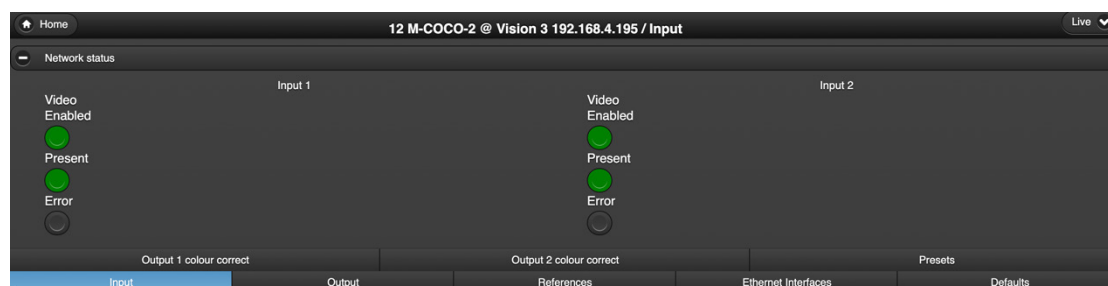


Input network status

Enabled LED: Green when input is enabled, otherwise off

Present LED: Green when input is present, otherwise off

Error LED: Red if lost or duplicate packets detected at input, otherwise off

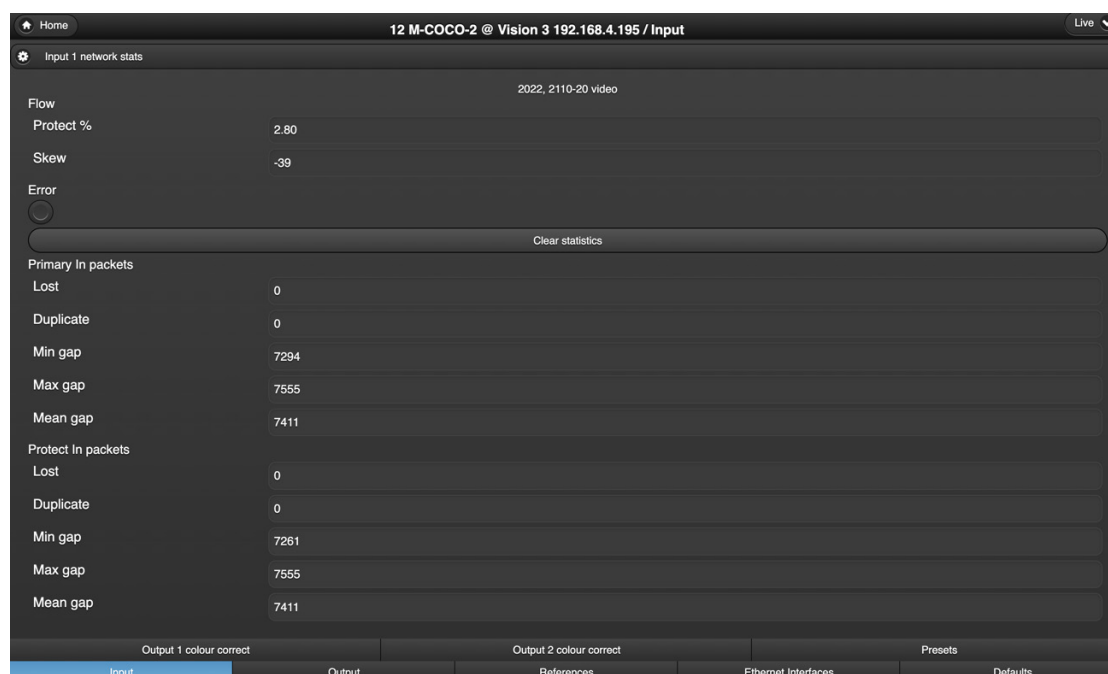

Input 1 flow network statistics

Flow Statistics

Protect %: Percentage of packets used from the 'protected' network input

Skew: Difference in packet arrival. -ve indicates protect packets are arriving first

Network In/Protect Network In pkts

Lost: Number of lost packets

Duplicate: Number of duplicate packets

Min gap: Minimum gap between packets (nSec)

Max gap: Maximum gap between packets (nSec)

Mean gap: Mean gap between packets of a frame (nSec)

6 Colour Correction and Legalising


6.1 Colour Correction

M-COCO-2 is equipped with two independent colour correctors, one on each output. A single input can be routed to each of the colour correctors, allowing any changes to be previewed before copying the settings to the programme output. Otherwise the default operation is a dual channel device, where Input 1 is routed to Output 1 Colour Corrector and Input 2 is routed to Output 2 Colour Corrector.

The colour correctors provide an impressive range of colour correction tools, with independent gain, lift and gamma in the RGB domain. The gain and lift tools are used together to effortlessly increase or reduce the red, green or blue individually, allowing M-COCO-2 to perform true colour correction. Overall gamma can be used to lighten or darken the picture without crushing the blacks or the whites, while independent adjustment of red, green and blue gamma allows extremely sophisticated colour manipulation. The YUV adjustment tools include independent lift, independent gain, overall video and chroma gain and chroma hue phase adjustment.

Correction Enable

Use the 'Correction' menu to enable colour correction, apply before/after wipes, highlight clipped pixels and enable internal test patterns.

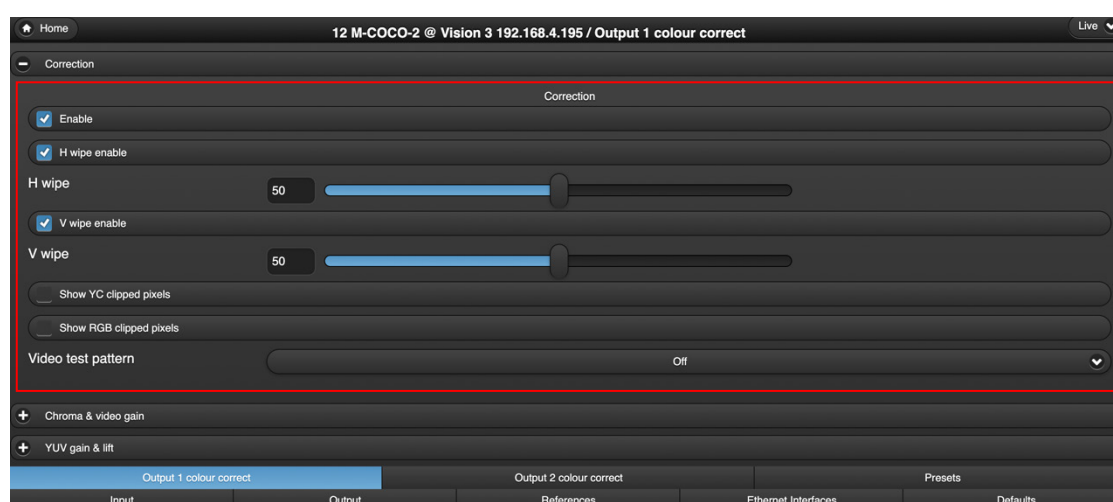

Correction Enable options

Enable: Select to enable colour correction processing. When disabled, all controls within the Colour Correct control tabs are bypassed.

H and V wipe enable: Enable a horizontal or vertical wipe to show before and after colour correction processing.

Show YC and RGB clipped pixels: Highlights pixels in pink which are outside the range of the clipping thresholds so are therefore subsequently being clipped.

Test pattern: Enables internal test pattern options, including ones useful to colour correction calibration such as colour bars and pluge.

Chroma & video gain

Enable and adjust chroma hue, chroma gain and overall video gain. Adjustments are % based.



Chroma & video gain

YUV gain & lift


Enable and adjust individual component Y, U and V channel gain and lift. Adjustments are % based.



YUV gain & lift

RGB gain & lift

Enable and adjust individual component Y, U and V channel gain and lift. Adjustments are % based.

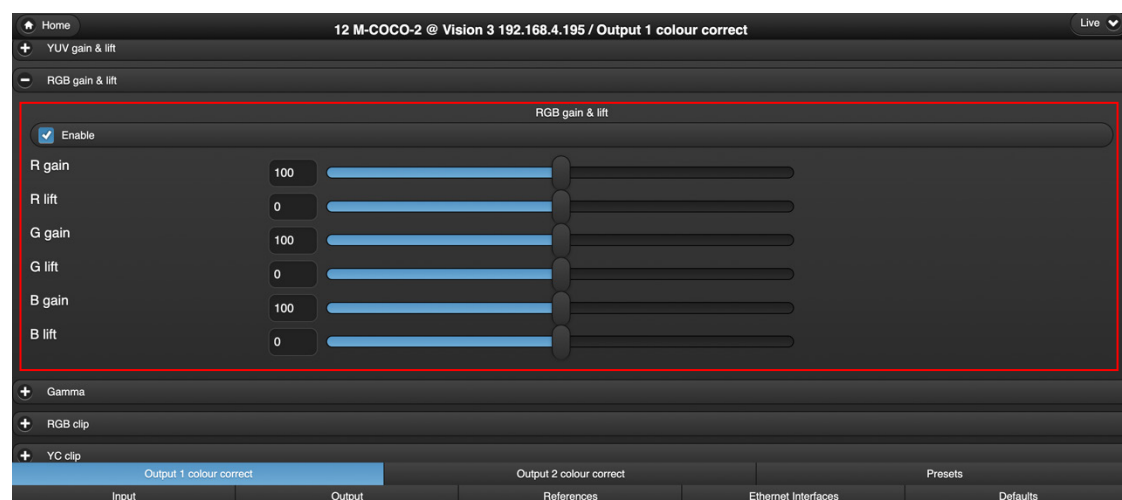

RGB gain & lift

Gamma

Enable and adjust overall and individual RGB Gamma. Adjustment uses a log base 2 scale where a value of +1 = gamma 2 and -1= gamma -0.5.



Gamma

6.2 Legalising

M-COCO-2 is equipped with two independent legalisers, one on each output. Both RGB and Y/C clipping is available to create a legal and natural-looking picture. The clipping can be set to hard, medium, or soft. RGB clipping has a 'Desaturation mode' to legalise by reducing the colour saturation on all RGB component channels without changing the hue and a 'Constant hue' mode to convert RGB to hue saturation colour space to reduce saturation without altering the hue. Being able to highlight pixels containing illegal signal values makes it easier to locate the problem.

RGB Clip


Enable and configure threshold levels and clipping mode.

Enable: Enables RGB Clip. Options are off, Custom, and EBU 103. Off disables RGB clip, Custom uses the threshold values as clipping range, EBU 103 utilizes EBU R 103 recommendation for clipping values.

Clip mode: Sets the mode of operation for clipping. Options include hard, medium, and soft that apply the absolute clip values with a hard, medium, or soft filter. Desaturation mode maintains RGB hue by proportionally reducing all channels if one channel is clipped. Constant hue mode transforms RGB to hue saturation intensity colour space and reduces saturation without changing hue.

Threshold hi: Set the maximum RGB video amplitude in percentage. Positive excursions exceeding this amplitude will be clipped.

Threshold lo: Set the minimum video amplitude in percentage. Negative excursions falling below this amplitude will be clipped.

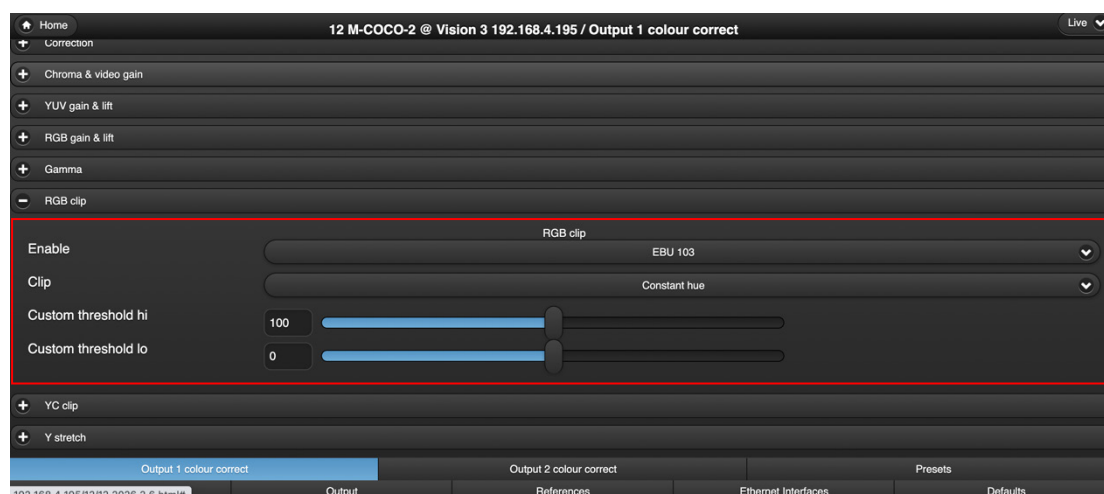

RGB clip

YC Clip


Enable and configure threshold levels and clipping mode.

Y threshold hi: Set the maximum Luma video amplitude in percentage. Positive excursions exceeding this amplitude will be clipped.

Y threshold lo: Set the minimum Luma video amplitude in percentage. Negative excursions falling below this amplitude will be clipped.

C threshold: Set the maximum Chroma video amplitude in percentage. Positive excursions exceeding this amplitude will be clipped.

Clip mode: Apply a hard, medium or soft clip to the Y or C channel being clipped.

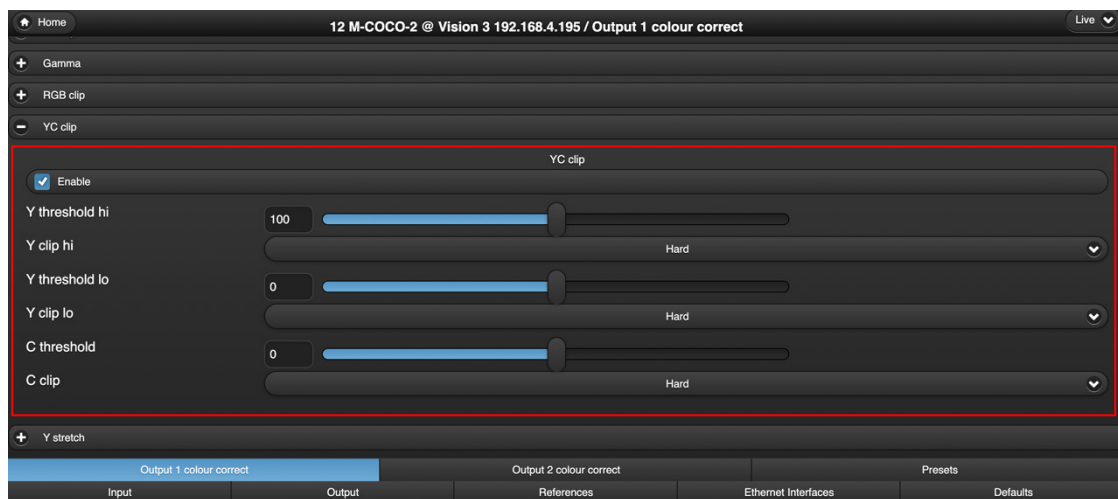

YC clip


Y Stretch

Y stretch is useful when critical colour correction is needed, for example, when shooting graphics displayed on on-set monitors.

Black stretch works in the lower range of the video signal allowing you to set a luminance range and then giving you a stretch control to raise/lower the luminance level within this range. Highlights stretch works with a range set in the higher luminance areas. Using the stretch control allows for this area of the video to be raised and lowered while not affecting any other luminance levels outside of this range.

Black/Highlights Threshold hi and lo: Upper and lower limits in percent of the signal range to be affected by the stretch.


Stretch: Raise or lower the luminance levels within the configured threshold range.

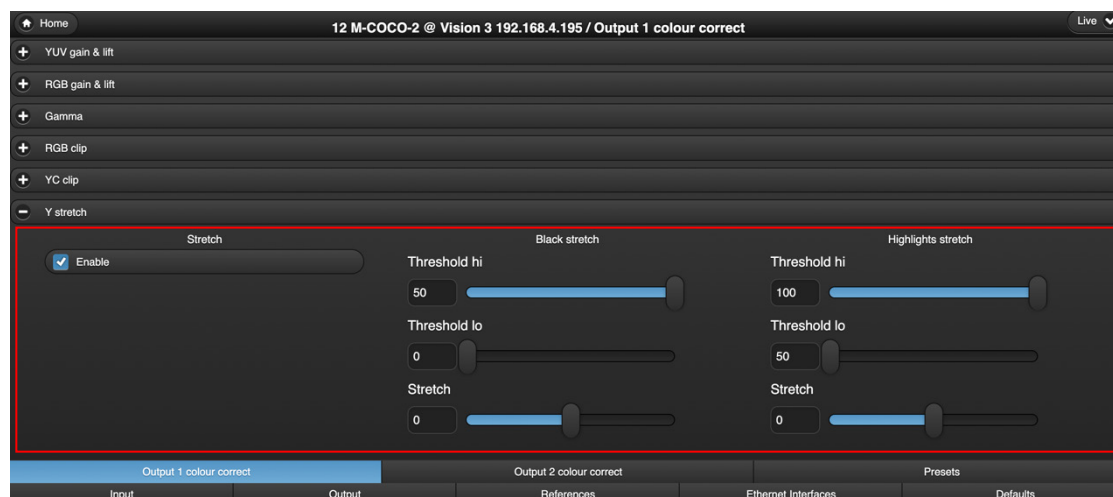

Y stretch

6.3 Colour Corrector Output Routing

M-COCO-2 features an independent colour corrector on each of the outputs. By default Input 1 routes to Output 1 Colour Corrector, and Input 2 routes to Output 2 Colour Corrector. If using a single input this can be routed to both output colour correctors, allowing the colour correction adjustments to be previewed on one output before copying across to the other.

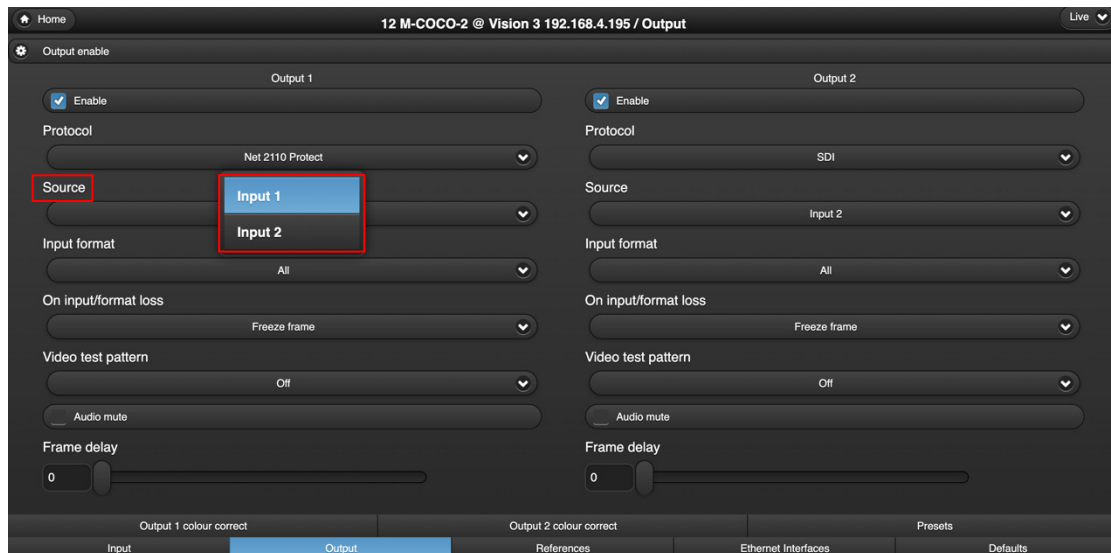

Output routing

7 References and Output Timing

7.1 References

M-COCO-2 outputs can be locked to a PTP clock, an analogue tri-level or Black & Burst sync or the SDI input if present and selected as the input protocol. If the chosen reference sources are absent at power up, the outputs will freerun to an internally generated clock.

Both outputs are locked to the same reference clock. It is not possible to lock different outputs to different clocks.

Inputs are not required to be the same frame rate as the chosen reference. It is possible, for example, to input 59.94Hz video locked to a 50Hz reference. However, frames will be dropped and repeated as necessary when cross-locking frame rates in order to maintain a valid output.

Status



Reference Status

Active source: Reference source outputs are locked to

Reference & PTP clock Present LEDs: Green when present, otherwise off

Time present: Length of time input has been present

Reference 1 & 2 Format: Read only text showing reference format e.g. 625i 50Hz

Reference configuration



The Reference Configuration window shows settings for clock references. It includes a 'Reference source' dropdown menu set to 'PTP>Ref1>Ref2>Hold', a checked 'Auto relock enable' checkbox, an 'Active source' dropdown menu set to 'ExtRef1', and a 'Force relock' button.

Reference Configuration


Reference source: Select priority order of reference source. Will automatically fail-over to next source in list if priority source missing

Auto relock enable: Automatically relocks to priority reference source upon its return

Active source: Read only text showing which reference source is in use

Force relock: Returns to priority reference source if auto relock is not enabled

PTP Configuration

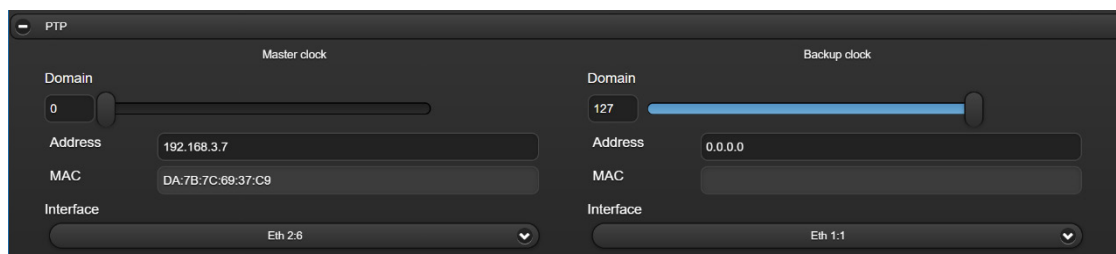

The PTP Configuration window is divided into two sections: 'Master clock' and 'Backup clock'. Each section has fields for 'Domain', 'Address', 'MAC', and 'Interface'. The Master clock section shows Domain 0, Address 192.168.3.7, MAC DA:7B:7C:69:37:C9, and Interface Eth 2:6. The Backup clock section shows Domain 127, Address 0.0.0.0, MAC (empty), and Interface Eth 1:1.

PTP Configuration

Domain: Domain number of the PTP clock

Address: IP address of the master and backup PTP clocks

MAC: Read only text showing the MAC address of the PTP clocks

Interface: Ethernet interface chosen to receive the PTP clock. The interface chosen must be configured for the same IP range and as the PTP clock

PTP Statistics

PTP master clock				PTP backup clock			
	Min	Max	Mean		Min	Max	Mean
Network delay	3375	4005	3495	Network delay	0	0	0
Delay variation	0	6713	161	Delay variation	0	1000	1000
Reference offset	0	831	115	Reference offset	0	0	0
Sync period	125010	125133	125078	Sync period	0	0	0

PTP statistics

Network delay: Calculated delay between MARBLE-V1 card and the master PTP clock. Expected to be small if network switch is PTP-aware, otherwise will reflect number of switches between MARBLE-V1 card and the master PTP source

Delay variation: Indicates system noise and how accurately MARBLE-V1 can lock. For example, to lock within 500ns, the delay variation should be less than 500ns

Reference offset: Offset between MARBLE-V1 card and master PTP clock. Expected to be less than 500ns

Sync Period: How often the PTP sync packets are seen. Indicates whether the master PTP clock is configured correctly, e.g. 8 packets a second, and whether there are any packets missing which could indicate a network issue

7.2 Output timing

The output timing controls adjust the offset delay of all outputs relative to the chosen reference source. All outputs are locked to the same reference source, it is not possible to offset each output individually. However, the offset can be set per video format, allowing for example, different output timing for HD and SD signals. If the input to chosen reference timing is close enough to fall below the card's minimum processing delay, a one frame delay will be applied. The output timing controls are sub-frame time based (ms and us). Status is provided for the equivalent lines and pixels delay.

Output timing

Output Timing

Enable: Select to enable the output timing controls. Minimum possible delay applied when deselected

Time adjustment sliders: Sub-frame adjustment of output timing relative to reference source


Format to modify: Independently adjust output timing for each video format

Apply to all formats: Select to apply the output timing adjustment to all video formats

Lines/Pixel: Read only status of the output timing in equivalent lines and pixels

7.3 Frame delay

Up to ten frames of delay adjustable in one frame steps can be applied to each output.

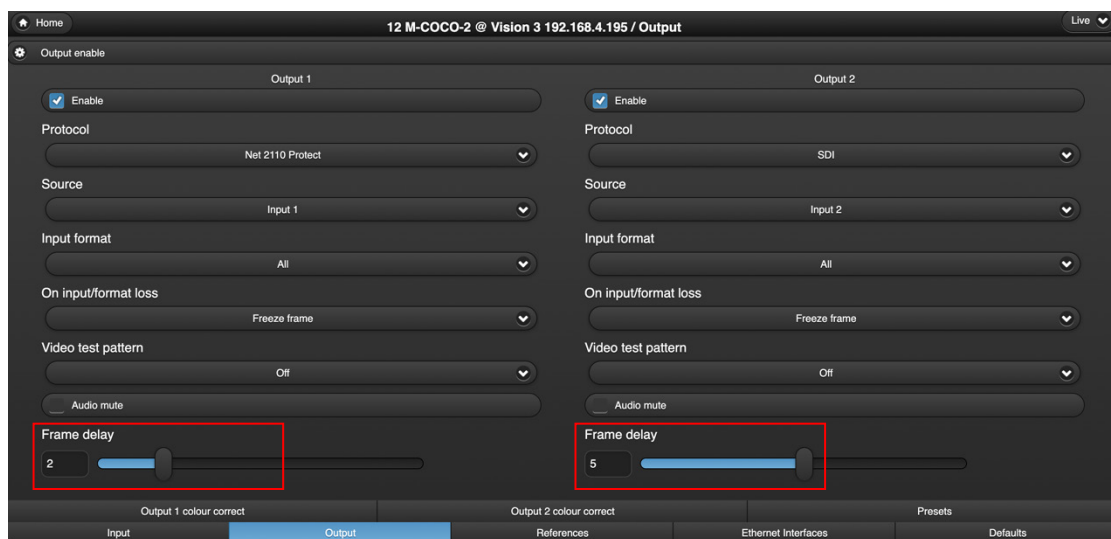

Output Frame Delay


8 Traffic Shaping Profile

8.1 Traffic Shaping Profiles

SMPTE ST 2022 transmits using a narrow linear profile, with all packets evenly spaced throughout the duration of each entire traditional corresponding SDI video frame.

SMPTE ST 2110-20 supports both narrow linear (TPNL) and narrow gapped (TPN) transmission. As per SMPTE ST 2022 transmission, TPNL transmits the packets evenly spaced throughout the duration of each entire video frame, but starting one line after the first Start-of-Frame (SOF) VANC period. TPN, however, does not transmit packets during the VBI or VANC period of the traditional corresponding SDI video frame.

For both SMPTE ST 2022 and ST 2110-20 protocols it is possible to 'burst' the packets out as fast as possible, using the 'Burst rate limit' control to determine the maximum bandwidth the burst traffic will limit to.

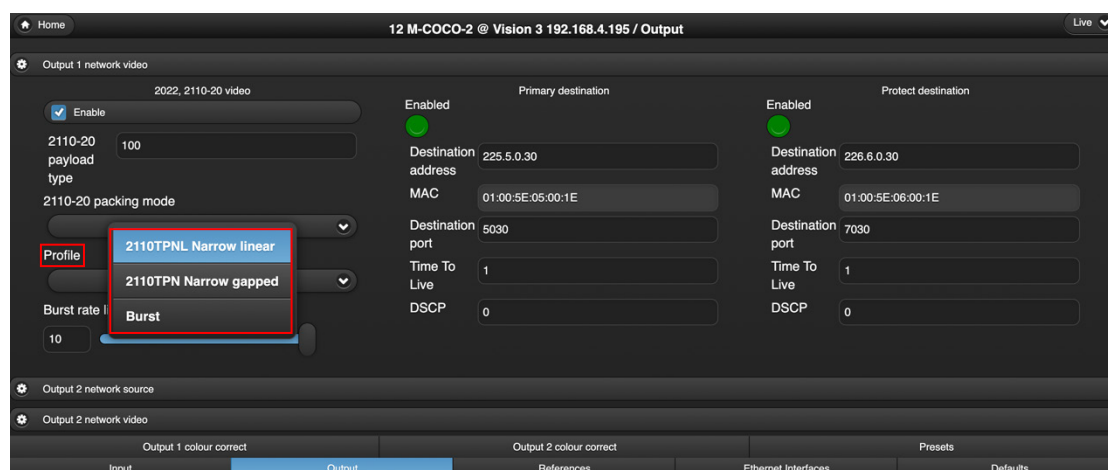


Traffic Shaping Profile

9 Input Format, Input Loss and Test Pattern Options

9.1 Input Format and On Loss of Input

All apps provide an Input Format control. If set to 'All', any input format present is deemed valid. If set to a single format, any input format present which does not match the selected format is deemed invalid, upon which the 'On loss of input' function is triggered.


In the example below, if the Input 1 format is not 1920x1080i 50Hz, the output will be replaced with colour bars.

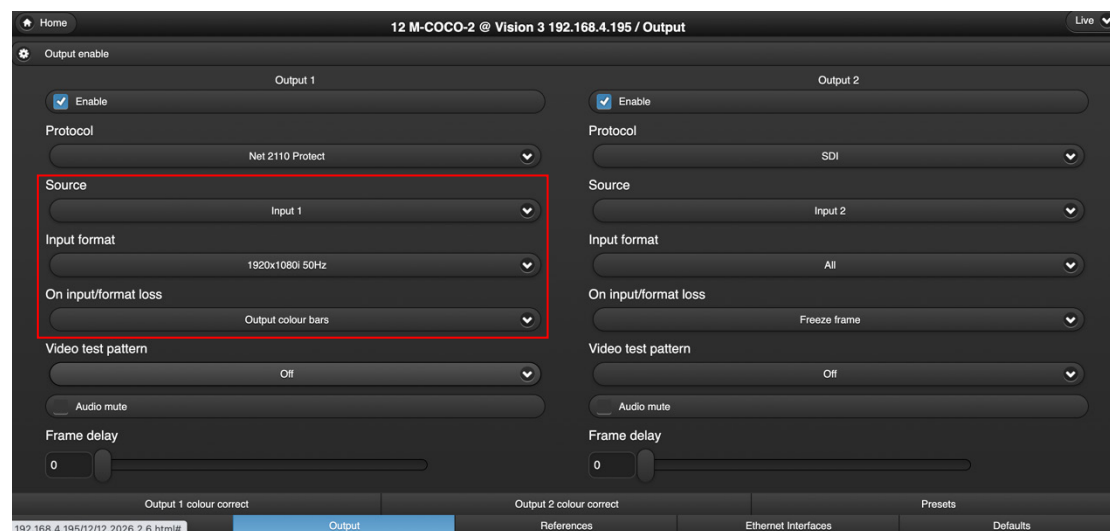

Input Format and On Loss Options

9.2 Internal Test Patterns


The following internal test patterns are provided which, when enabled, replace the outgoing video content with the selected test pattern. Test patterns are inserted before the colour corrector to aid getting the best settings, which is especially useful when sending pre-distorted images to on-set monitors. Having the test pattern generator in the colour corrector simplifies the workflow.

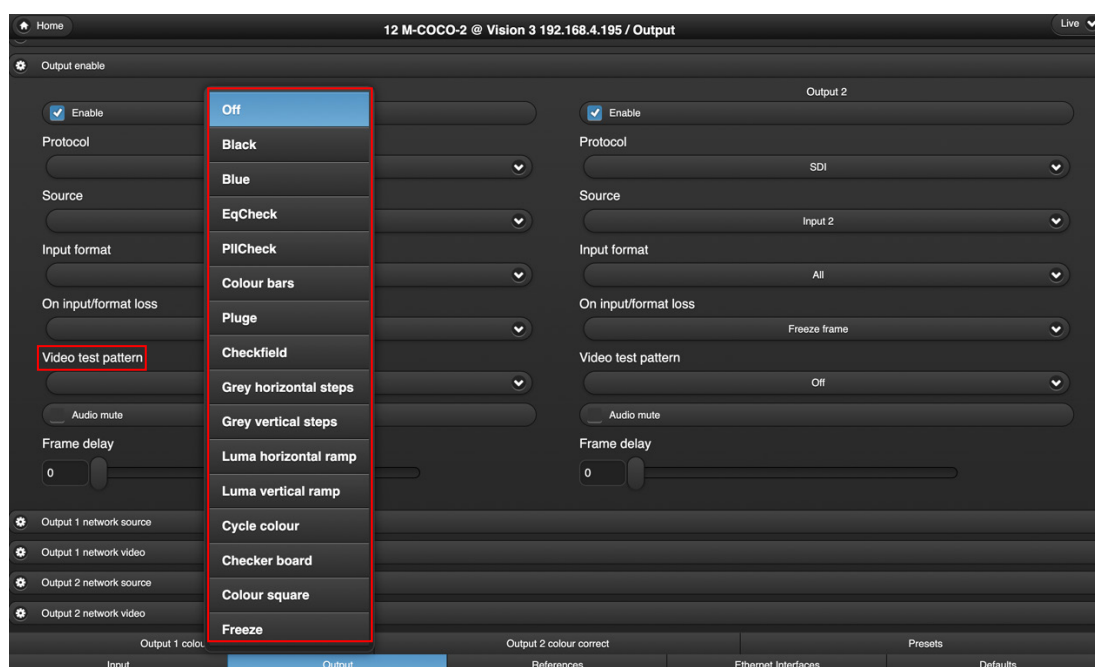

Internal Test Pattern options

9.3 Audio mute

Embedded audio present in SDI or ST 2022 inputs will be passed through to the outputs. Use the Audio mute controls to mute embedded audio present on the outputs.

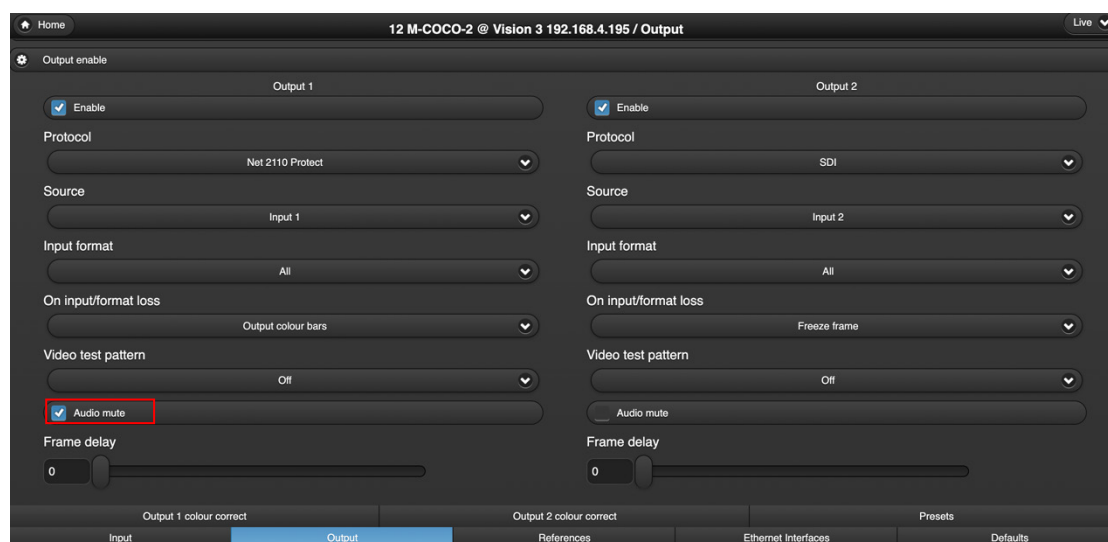

Audio mute

10 Unicast Configuration

To transmit a unicast flow, the output network video 'Destination address' should be the IP address of the downstream Ethernet Interface you want to transmit to. The example below shows that, rather than transmitting using a multicast address, interface 1:3 on the M-COCO-2 is now set to transmit to a downstream device with IP address 192.168.5.80.

The screenshot displays the configuration interface for the M-COCO-2 device, specifically the 'Output' tab for 'Output 1 network source'. The interface is divided into several sections:

- Output 1 network source:** This section contains fields for 'Interface' (set to 'Eth 1:3'), 'VLAN' (2005), 'Source address' (192.168.5.74), 'MAC' (84:DE:3D:01:46:20), and 'Source port' (50011).
- Output 1 network video:** This section includes a '2022, 2110-20 video' section with an 'Enable' checkbox checked, a '2110-20 payload type' set to 100, a '2110-20 packing mode' set to 'General', a 'Profile' set to '2110TPNL Narrow linear', and a 'Burst rate limit' slider set to 10.
- Primary destination:** This section shows 'Enabled' status with a green checkmark, 'Destination address' (192.168.5.80), 'MAC' (84:DE:3D:DE:AE:A8), 'Destination port' (5030), 'Time To Live' (1), and 'DSCP' (0).
- Protect destination:** This section shows 'Enabled' status with a green checkmark, 'Destination address' (192.168.5.81), 'MAC' (80:2A:A6:5E:E2:F0), 'Destination port' (7030), 'Time To Live' (1), and 'DSCP' (0).

The 'Output' tab is selected, and the 'Destination address' field in the 'Primary destination' section is highlighted with a red box.

Unicast IP Address transmit

When receiving a unicast flow, the input network video 'Multicast address' should be set to 0.0.0.0. The 'Source address' can be one of two options. If set to 0.0.0.0 it will accept any source transmitting to its virtual interface IP address. This is acceptable if it is known only one device at a time will be transmitting to it. Alternatively, the 'Source address' can be limited to only receive from one IP address, as shown in the example below, where the source address is limited to only receiving traffic from a device with IP Address 192.168.5.20.

The screenshot displays the configuration interface for the M-COCO-2 device, specifically the 'Input 1 network video' section. The interface is divided into three main columns: 'Input 1 network video', 'Primary', and 'Protect'. The 'Input 1 network video' column includes settings for '2022, 2110-20 video' (Enabled), 'SSRC' (empty), '2110-20 payload type' (100), and '2110-20 video format' (1920x1080i 50Hz). The 'Primary' column shows 'Enabled' (green dot), 'Interface' (Eth 1:1), 'VLAN' (2005), 'Source address' (192.168.5.20, highlighted with a red box), 'MAC' (empty), 'Source port' (0), 'Multicast address' (0.0.0.0, highlighted with a red box), 'Destination address' (192.168.5.72), 'MAC' (84:DE:3D:01:46:20), and 'Destination port' (5001). The 'Protect' column shows 'Enabled' (green dot), 'Interface' (Eth 2:1), 'VLAN' (2006), 'Source address' (0.0.0.0), 'MAC' (empty), 'Source port' (0), 'Multicast address' (0.0.0.0), 'Destination address' (192.168.6.72), 'MAC' (84:DE:3D:01:46:21), and 'Destination port' (7001). At the bottom, there are tabs for 'Input', 'Output', 'References', 'Ethernet Interfaces', 'Presets', and 'Defaults'.

Unicast IP Address receive

11 Basic Trouble Shooting

11.1 No input or output signals present

- Confirm using GUI status LEDs whether the problem is input or output related
- Check SDI and fibre cabling
- Check inputs are enabled (off by default)
- Check outputs are enabled (off by default)
- Check correct IP protocol has been selected
- Check IP flow parameters (protocol type, IP address, VLANs, ports etc.) are configured correctly
- Check Ethernet Interface IP parameters are configured correctly
- Check Ethernet Interface link present LED is illuminated on GUI

11.2 Errors in the IP flow's video content

- Check the 'Ignored packets' count on the Ethernet Interfaces tab of GUI is incrementing in no more than values of 10s. Incrementing in values of 100s indicates a network flooding problem.
- Check the 'Ignored multicast' LED on the Ethernet Interfaces tab of GUI is not illuminated. If illuminated, this indicates multicast packets are being flooded to the card's Ethernet Interface port, a likely cause of which is incorrectly configured IGMP on the network switch.
- Check input flow network statistics for lost or duplicate packets. Check maximum gap is less than 12000ns (0.012us). Larger gaps could indicate bursts in the IP packets.

11.3 IP flows keep stopping after a few minutes

- Check IGMP is enabled and correctly configured on the network switch

12 Specification

M-COCO-2 APP RUNNING ON MARBLE-V1 MEDIA PROCESSOR

MECHANICAL

'Double slot' Vision card 96mm x 303mm (96mm x 325mm including finger pull)

Weight: 355g

Power consumption: 25 Watts, plus 1 Watt for each SFP+ fitted to MARBLE-V1

INPUTS AND OUTPUTS

Inputs can be IP and/or SDI

Outputs can be IP and/or SDI

Four BNCs for SDI and up to four fibre SFP+ 10GbE IP network interfaces. Choice of fibre modules: either 850nm multi-mode (for up to 300m) or 1310nm single-mode (for up to 10km)

Inputs and outputs can be mixture of ST 2022 and ST 2110. Video can be passed between ST 2022 and ST 2110, although audio and any other non-video data will be lost

IP only, SDI to IP and IP to SDI applications require at least one SFP+ transceiver option, up to a maximum of four. All IP inputs and outputs can be received and transmitted on a single network interface. The use of two or more interfaces is recommended for separating main and protect video flows associated with the IP input/output. Multicast and unicast addresses are supported on a single network interface or can be divided across multiple interfaces

SDI only applications do not require any SFP+

Uses VR04, VR06 or VR07 frame rear modules. VR04 or VR07 must be used when more than two SFP+ are fitted

SDI VIDEO INPUTS

(NB. Some or all of the inputs can be IP instead)

Up to two 3Gb/s or HD or SD SDI inputs

270Mb/s or 1.5Gb/s or 3Gb/s serial compliant to SMPTE 259, SMPTE 292-1 and SMPTE 424/425-A

3Gb/s cable equalisation up to 100m using Belden 1694A. HD cable equalisation up to 140m with Belden 1694A or equivalent (approx. 100m with Belden 8281). SD cable equalisation >250m Belden 8281 or equivalent

IP INPUTS

(NB. Some or all of the inputs can be SDI instead)

Up to two 3Gb/s or HD or SD video over IP inputs

Packet distribution is not important as variable input buffer will compensate for any timing irregularities. Any traffic shaping option from ST 2110-21 can be used, or packets can come from a device which does not meet the shaping requirement of ST 2110-21

A protect input for SMPTE ST 2022-7 seamless protection switching or the equivalent protect input in ST 2110-20 can come from any of the 10GbE IP network interfaces. This protects the video flow from lost packets by creating two streams of the same data using different routing to the destination. IP packet analyser handles the analysis and reconstruction of the protected

video flow. Any IP input can come from any of the 10GbE IP network interfaces and can either be multicast or unicast

SDI VIDEO OUTPUTS

(NB. Some or all of the outputs can be IP instead)

Up to two 3Gb/s or HD or SD SDI outputs, one per channel (or two outputs if M-COCO-2 configured as single channel device)

270Mb/s or 1.5Gb/s or 3Gb/s serial compliant to SMPTE 259, SMPTE 292-1 and SMPTE 424/425-A

IP OUTPUTS

(NB. Some or all of the outputs can be SDI instead)

Up to two 3Gb/s or HD or SD video over IP outputs, one per channel (or two outputs if M-COCO-2 configured as single channel device)

Any of the 10GbE IP network interfaces can be used to provide a protected output for SMPTE ST 2022-7 or ST 2110 seamless protection switching, which protects the stream from lost packets by creating two streams of the same data using different routing to the destination. Alternatively it is possible to have a unicast on some network interfaces and a multicast on others

RELAY BYPASS PROTECTION (SDI ONLY)

The VR07 frame rear module provides dual relay bypass protection when M-COCO-2 is used with both SDI inputs and SDI outputs

The relay bypass protection protects the video output on frame power failure or if the MARBLE-V1 card loses power or is removed

An electromechanical relay switch on the VR07 needs power to hold the switch in one state and will revert to the other state (card bypass) on loss of power. It prevents signal loss by mechanically connecting an SDI input to an SDI output: SDI 1 In is connected to SDI 1 Out and SDI 2 In is connected to SDI 2 Out

NB. Use of the VR07 requires issue 5 or later of MARBLE-V1

VIDEO FORMATS SUPPORTED

The video formats supported are 625i, 525i, 720p50, 720p59.94, 720p60, 1080i50, 1080i59.94, 1080i60, 1080p23.98, 1080p24, 1080p25, 1080p29.97, 1080p30, 1080p50, 1080p59.94, 1080p60, 1080PsF23.98, 1080PsF24, 1080PsF25, 1080PsF29.97, 1080PsF30, 2048x1080p23.98*, 2048x1080p24*, 2048x1080p25*, 2048x1080p29.97*, 2048x1080p30*, 2048x1080PsF23.98*, 2048x1080PsF24*, 2048x1080PsF25*, 2048x1080PsF29.97*, 2048x1080PsF30* (*= YUV 4:2:2 10 bit)

IP PROTOCOLS

Protocols supported on network interfaces: SMPTE ST 2022-6, SMPTE ST 2022-7, SMPTE ST 2110-20 (uncompressed video), SMPTE ST 2110-10 (system architecture and synchronisation), SMPTE ST 2110-21 (traffic shaping), IGMPv3, ARP, ICMP ping, IPv4, IEEE802.1q, VLAN, IEEE802.3-2012 (10G Ethernet)

Packing options of the ST 2110-20 video flow are selectable per IP output between BPM and GPM (Block Packing Mode or General Packing Mode)

Packet shaping and distribution of the video flow (compulsory in ST 2110 and optional in ST 2022) is selectable per IP output between TPNL and TPN (narrow linear or narrow gapped packet distribution). There is also a mode for burst packet distribution with a control for the

burst rate limit. This is for connecting between Crystal Vision and other compatible devices that allow for a reduced transmission delay

SMPTE ST 2022-7 and ST 2110 video flow protection facilitates the dual stream output

ROUTING

There are two clean switches that can select between the two inputs for each of the output colour corrector function blocks

The default setting – which gives a dual channel colour corrector – is Input 1 to Output 1 and Input 2 to Output 2

It is also possible to give both colour corrector function blocks the same input to get a 'preview output'. The setting for this – which gives a single channel colour corrector with two outputs – would be Input 1 to both Output 1 and Output 2

An alternative application is to cleanly live switch the input of a single channel colour corrector without any output signal disturbance. The setting for this would be Input 1 to Output 1 cleanly followed by Input 2 to Output 1. The second colour corrector function block can be used, but it is limited to using the inputs already reserved for the first colour corrector function block. If the second colour corrector function block was being used as a preview, the setting would be Input 1 to Output 1 and Output 2 cleanly followed by Input 2 to Output 1 and Output 2

COLOUR CORRECTIONS

Each channel has its own colour corrector function block

The Enable tick box is used to enable/disable the colour corrector function

Increase/decrease overall lift and gain

Increase/decrease overall chroma gain

Increase/decrease Y channel lift and gain Increase/decrease U channel lift and gain

Increase/decrease V channel lift and gain Chroma hue adjustment

Increase/decrease R channel lift and gain Increase/decrease G channel lift and gain

Increase/decrease B channel lift and gain

Increase/decrease overall gamma

Increase/decrease R gamma

Increase/decrease G gamma

Increase/decrease B gamma

Black Stretch: Lifts or suppresses luminance close to black, with the range affected specified by the Threshold lo and Threshold hi controls. The Stretch variable controls the amount of adjustment

Highlights Stretch: Lifts or suppresses the luminance wherever required, with the range affected specified by the Threshold lo and Threshold hi controls. The Stretch variable controls the amount of adjustment

LEGALISING

Each channel has its own legaliser with RGB and Y/C clipping

RGB clip:

Set and limit R, G, B channel positive and negative excursions

The Enable control can be set to Off, Custom or EBU 103. "Off" disables RGB clip functions.

"Custom" uses the values in the Custom threshold hi and Custom threshold lo settings. "EBU 103" legalises to the EBU R 103 standard

With "Custom" and "EBU 103", the RGB clip can be set to hard, medium, soft, desaturation or constant hue mode

To avoid affecting hue, two modes are available: desaturation and constant hue. With desaturation mode, clip applied to one channel will cause a proportional reduction to the other channels. With constant hue mode, RGB is transformed into saturation intensity colour space and saturation is then reduced

Hard, medium and soft are sloped controls with a hard, medium or soft filter added

Y/C clip:

Set and limit luma (Y) positive and negative excursions independently

Set and limit chroma (C) positive and negative excursions symmetrically

The Enable tick box is used to enable/disable the Y/C clipping

The Y threshold hi, Y threshold lo and C threshold can be set, with hard, medium and soft modes available for each

GAMUT ERROR HIGHLIGHTING

The Show Y/C and RGB clipped pixels settings will highlight any pixels containing illegal signal values, making it easier to locate the problem and make any adjustments to equipment in the system. If wipes are set, the highlighted pixels will only be shown in the wiped areas

If M-COCO-2 is configured as the default two channel device, the highlighted pixels can be viewed on the main output before going on air

If M-COCO-2 is configured as a single channel device with Output 2 used as a 'preview output', the highlighted pixels can be viewed on the 'preview output' at any time. Here the second colour corrector can be adjusted to make the picture legal without affecting the first colour corrector and main output, with these good set of adjustments able to be manually copied over to the first colour corrector

WIPES

The H wipe and V wipe can be used to wipe horizontally or vertically between the processed and unprocessed signal for a split-screen 'before' and 'after' comparison

If M-COCO-2 is configured as the default two channel device, the wipes can be viewed on the main output before going on air

If M-COCO-2 is configured as a single channel device with the Output 2 used as a 'preview output', the wipes can be viewed on the 'preview output' at any time

VIDEO LOSS CONTROLS

The video loss/format mismatch controls allow the user to select what will happen to an output in the event that the input is lost or the video format does not match the specified format. The user can specify to freeze the last good frame or show a black or blue screen or 100% colour bars (with or without an initial delay of three seconds). No output can also be selected. This is independently adjustable on each output

TEST PATTERNS

The test pattern controls allow the user to override an input and force the output to output a test pattern including Colour Bars, Blue, Black, EqCheck, PlICheck, Pluge, Checkfield, Grey Horizontal Steps, Grey Vertical Steps, Luma Horizontal Ramp, Luma Vertical Ramp, Cycle Colour, Checker Board or Colour Square, or to freeze the picture. This is independently adjustable on each output

Test patterns are inserted before the colour corrector to aid getting the best settings, which is especially useful when sending pre-distorted images to on-set monitors

AUDIO MUTE CONTROL

The output audio mute control allows the user to mute the audio embedded within any of the SDI or ST 2022 outputs

SYNCHRONISER AND TIMING ADJUSTMENTS

Video sources are synchronised to common reference timing source

Choice of timing options:

- PTP (SMPTE ST 2059-2) master and backup, via 10GbE IP network interface
- Two tri-level syncs or analogue Black and Burst references (Reference 1 and Reference 2), connected via the Vision 3 frame
- SDI video input, where available (defaults to SDI 1)

Chosen reference is the global reference source for all inputs and outputs

There are up to ten options for the reference selection, selectable via VisionWeb. The hierarchy runs from left to right – should the timing source at the top of the list become missing or invalid, the app will move down the list until it finds a valid timing reference source. When used with IP inputs, the SDI reference option is not applicable and therefore the reference will move to the next valid timing source:

- PTP>Ref1>Ref2>Hold
- PTP>Ref1>Hold
- PTP>Ref2>Ref1>Hold
- PTP>Ref2>Hold
- PTP>Hold
- PTP>Ref1>Ref2>SDI>Hold
- PTP>Ref1>SDI>Hold
- PTP>Ref2>Ref1>SDI>Hold
- PTP>Ref2>SDI>Hold
- PTP>SDI>Hold

(“PTP” means PTP Master>PTP Backup. “SDI” means SDI1>SDI2>SDI3>SDI4>SDI5 >SDI6, dependent on number of SDI available. “Hold” means it will hold the timing of the last good reference)

When using video reference, video inputs can be different formats but only inputs with the same frame rate as reference video will be locked to that reference. Input signals of same frame rate as reference will be locked together and locked to external reference. Inputs with a differing frame rate will be locked and maintain timing with no drift, but their sync point will be undefined (all same frame rate signals will, however, be locked to each other)

When using PTP reference, input sources of different format and/or frame rate will all be correctly locked to the PTP reference

PTP timing reference should be used when there is a ST 2110-20 output to ensure the RTP timestamp is related to the time of day. However without a PTP reference, a valid ST 2110-20 signal will still be generated using a free running RTP timestamp

When Auto relock enable is selected, the card will automatically relock when a lost reference is restored. Selecting Force lock (with Auto relock disabled) will force the synchroniser to relock after a reference is restored, and can be activated at a non-critical time to avoid video disturbance

Output timing can be fully adjusted with respect to the reference using three time-based controls: 0 - 42ms adjustable in 0.1ms steps, 0 - 100us adjustable in 1us steps and 0 - 1us adjustable in 5ns steps. Sub frame timing alignment to chosen reference is global to all outputs

An additional ten frames of video delay (adjustable in one frame steps) allows compensation for any big system delays. This delay can be configured individually for each SDI or IP output

ANCILLARY DATA

All ancillary data (including audio and locked Dolby E) is passed from SDI or ST 2022 input to SDI or ST 2022 output. When ST 2110 input or output is selected, all ancillary data is discarded

LED INDICATION OF:

Power okay

PRESETS

The current app settings can be saved in one of 16 locations to be recalled as required
App settings and Input/Output configuration settings can be stored and recalled independently

SIGNAL MONITORING

Comprehensive SDI, IP and PTP monitoring information is available and can be used to generate SNMP traps

Checks can be performed on the following video and audio parameters:

- Video present and time present
- Video format
- Video black
- Video frozen
- Video error
- Audio group 1 present
- Audio group 2 present
- Audio group 4 present
- Audio present on group 1 channel 1
- Audio present on group 1 channel 2
- Audio present on group 1 channel 3
- Audio present on group 1 channel 4
- Audio present on group 2 channel 5
- Audio present on group 2 channel 6
- Audio present on group 2 channel 7
- Audio present on group 2 channel 8
- Audio present on group 3 channel 9
- Audio present on group 3 channel 10
- Audio present on group 3 channel 11
- Audio present on group 3 channel 12
- Audio present on group 4 channel 13
- Audio present on group 4 channel 14
- Audio present on group 4 channel 15
- Audio present on group 4 channel 16
- Silence group 1 channel 1
- Silence group 1 channel 2
- Silence group 1 channel 3
- Silence group 1 channel 4
- Silence group 2 channel 5

- Silence group 2 channel 6
- Silence group 2 channel 7
- Silence group 2 channel 8
- Silence group 3 channel 9
- Silence group 3 channel 10
- Silence group 3 channel 11
- Silence group 3 channel 12
- Silence group 4 channel 13
- Silence group 4 channel 14
- Silence group 4 channel 15
- Silence group 4 channel 16

Black or frozen video will be indicated by an amber LED. This alert can be delayed by 1-120 seconds to prevent false warnings during brief video pauses

The audio silence alert is triggered at an audio level of -93dbFS and can be delayed by 1-120 seconds to prevent false warnings during quiet audio periods

The following IP parameters are monitored for input flows:

- Network error
- Packet loss
- Duplicated packets
- Packet delay variation. Shown as the skew (difference in time of packet arrival) between the main and protected input, and also as the min and max nano second gap between the packets on each input

The Ethernet interfaces are monitored for:

- Count of packets ignored by the app (general network traffic non-media packets, which do not require processing by the app). Jumps in 100 step increments indicate network traffic flood
- Ignored multicast packets. LED indicates multicast traffic not requested by the app is present on the Ethernet Interface, indicating incorrectly configured IGMP at the network switch

References are monitored for:

- Reference 1 and 2 present and time present
- Reference 1 and 2 format
- PTP master and backup clock present and time present
- PTP statistics – network delay, delay variation, reference offset and sync period

REMOTE CONTROL

Software:

VisionWeb Control is available via the web server on the frame and allows monitoring using a standard web browser on a PC or tablet

SNMP monitoring and control available as standard

Control using ASCII and JSON protocols

Hardware:

Control from integrated control panel on Vision 3 frame

Control from VisionPanel 3U remote panel

SBB-4 smart button box connects to the frame via Ethernet and provides four programmable LCD switches (which are configured for each order). The SBB-4 uses information from VisionWeb for settings. Uses Power over Ethernet so must be used with PoE enabled switch