

digital keying modular
interface audio
converters analogue video

GEN102

Test pattern generator

USER MANUAL



GEN102 Digital Test Pattern Generator

USERS MANUAL

GD 13-11-01
PCB Issue 4.0

CONTENTS

INTRODUCTION	3
MECHANICAL	3
ELECTRICAL.....	3
ANALOGUE INPUT	3
OPTIONS AVAILABLE FROM FRONT PANEL.....	4
DIL SWITCH.....	4
LEDs	4
LINKS	5
INSTALLATION INFORMATION.....	6
GENERAL PURPOSE INTERFACE	6
GPI CONNECTIONS	6
FR2AV 2U FRAME FOR 12 MODULES	8
FR1AV 1U FRAME FOR 6 MODULES	8
DTBAV 1U FRAME FOR 2 MODULES	8
RM01 CONNECTIONS.....	8
FR1-6 1U FRAME FOR 6 MODULES.	9
VIDEO CONNECTIONS.....	9
FR2-12 2U FRAME FOR 12 MODULES.....	9
VIDEO CONNECTIONS.....	10
FR2-8 2U FRAME FOR 8 MODULES.	10
VIDEO CONNECTIONS.....	10

INTRODUCTION

The GEN102 is a 10-bit Serial Digital Test Pattern Generator. It is very compact with 6 modules fitting in a 1U frame or 12 in a 2U frame. It will generate either 625 or 525 line standard outputs, with automatic detection from external sync signal.

The GEN102 will plug into the front of either the range of Crystal Vision Universal video frames, or the AV range with its selectable audio and video rear connector modules. Allowing a mixture of Crystal Vision module to used side by side in a single frame.

The hinged front panel of the case reveals user control of the card, and also LED indication of status. There is an 8-way piano switch that allows selection of some user options, and a rotary switch for test pattern selection. Further configuration is possible using movable links.

SPECIFICATION

MECHANICAL

Dimensions 100mm x 266mm module with DIN 41612 connector. User adjustments and indication at end of board to allow access from hinged front panel.

Weight 180g

ELECTRICAL

Analogue Input Sync Input 300mV or 2 volt into 75 ohms.
Auto or manual 525/625 selection.

+/- 2us adjustment of picture position from syncs.

Outputs 2 x 270Mb/s serial digital to EBU Tech 3267-E & SMPTE
259M.

Each will drive >200m Belden 8281 or equivalent.

Power Consumption 5W.

Blanking To 601 specification.

Test Patterns The GEN102 has 8 digital test patterns.

Options available from Front Panel

VIEW OF BOARD FRONT



DIL SWITCH

		Up	Down
1			
2	XSY	Free running	External Syncs
3			
4			
5			
6	TS		Must be down
7	SP	Must be up	
8	CALH	Picture position User adjust	Default picture position (RV10)

Test Pattern Rotary Switch

0	SDI test
1	EBU Colour Bars
2	100% Colour Bars
3	Multi frequency burst
4	Grey
5	Frequency Sweep
6	Edge of frame markers
7	Ramps
8	Same as 0
9	Same as 1

FRONT PANEL LEDs

Lock Error	Red	Serial digital Errors detected.
625	Yellow	625 line input detected. Only valid if I/P present.
525	Yellow	525 line input detected. Only valid if I/P present.
Input Present	Green	Valid Serial Digital input detected.
+5V	Green	Power supply voltage present.

Horizontal position adjustment

Allows adjustment of horizontal picture position up to +/- 2us from reference sync input when selected with DIL8.


625/525 Line Mode selection

625/525 line selection is controlled by a link on J1 or J2. see table.

There are 4 potentiometers on the board. These are factory set and should not need adjustment.

Link positions.

The positions of the jumper links are shown below.

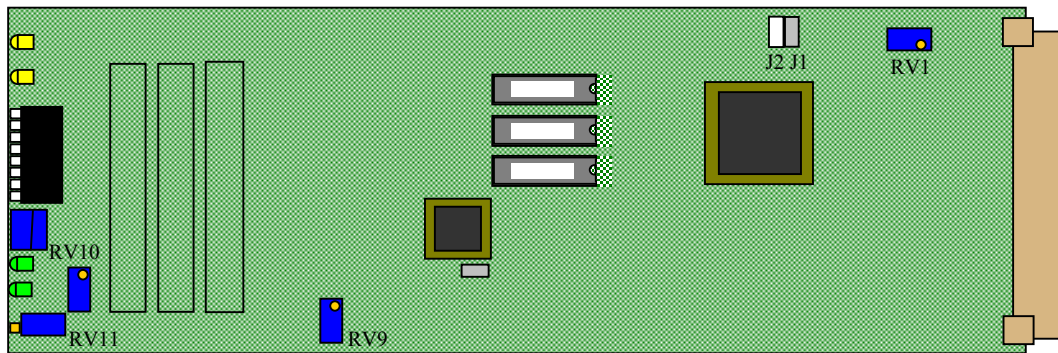

Link position

Position Link Fitted	Function
J1	Auto
J2	525
Not fitted	625

Factory Presets

The following Link and Pot information is given for reference only and should not need adjusting.

J1 closed (auto line selection)
J2 open

RV1 Auto standard reference (With 625 input set for 36.6 ms on TP12)
RV9 VCO free running frequency
RV10 Picture position default.
RV11 Picture position User adjust.

General Purpose Interface

Remote control is possible by GPI. In GPI configuration, remote switches can be used to emulate some of the front panel switches. Normally pulled up on-board to +5V via 2k2.

GPI Functions

	OPEN	CONNECT TO GROUND
'a'		
'b'		
'c'		
'd'	Sync present on Y and G	External Sync selected
'e'		
'f'		

GPI CONNECTIONS

Each slot has an associated set of connections on the frame rear-panel remote connectors. The tables below show the GPI connections described above.

Remote 1 and Remote 3: 26 way high density D-type **sockets**.

[+5V @ 500mA is pin 1 FR-AV]. Frame ground is pin 2.

Remote 2 and Remote 4: 26 way high density D-type **plugs**.

[+5V @ 500mA is Remote 2 pin 15 FR-AV]. Frame ground is pin 6.

Table shows Pin number (Remote Plug/Socket number)

FR1 Slot No.	FR2 Slot No.	'a' pin no.	'b' pin no.	'c' pin no.	'd' pin no.	'e' pin no.	'f' pin no.
1	1	8 (1)	9 (1)	18 (1)	26 (1)	19 (2)	20 (2)
2	2	7 (1)	16 (1)	17 (1)	25 (1)	10 (2)	11 (2)
	3	8 (3)	9 (3)	18 (3)	26 (3)	19 (4)	20 (4)
	4	7 (3)	16 (3)	17 (3)	25 (3)	10 (4)	11 (4)
3	5	5 (1)	6 (1)	15 (1)	24 (1)	1 (2)	2 (2)
4	6	4 (1)	14 (1)	13 (1)	23 (1)	3 (2)	4 (2)
	7	5 (3)	6 (3)	15 (3)	24 (3)	1 (4)	2 (4)
	8	4 (3)	14 (3)	13 (3)	23 (3)	3 (4)	4 (4)
5	9	3 (1)	12 (1)	22 (1)	21 (1)	12 (2)	13 (2)
6	10	10 (1)	11 (1)	19 (1)	20 (1)	21 (2)	22 (2)
	11	3 (3)	12 (3)	22 (3)	21 (3)	12 (4)	13 (4)
	12	10 (3)	11 (3)	19 (3)	20 (3)	21 (4)	22 (4)

DTBAV GPI CONNECTIONS

Remote 15 way D-type socket.
Frame ground is pin 15.

Table shows Pin number

Slot no.	'a' pin no.	'b' pin no.	'c' pin no.	'd' pin no.	'e' pin no.	'f' pin no.
1	1	2	3	4	5	6
2	9	10	11	12	13	14

FR2-8 FRAME

Remote 1 and Remote 2: 26 way high density D-type **sockets**. Frame ground is pin 1.
PSU Relay connection on pin 10.

Table shows Pin number (Remote Socket number)

Slot no.	'a' pin no.	'b' pin no.	'c' pin no.	'd' pin no.	'e' pin no.	'f' pin no.
1	8 (1)	9 (1)	17 (1)	18 (1)	25 (1)	26 (1)
2	6 (1)	7 (1)	15 (1)	16 (1)	23 (1)	24 (1)
3	8 (2)	9 (2)	17 (2)	18 (2)	25 (2)	26 (2)
4	6 (2)	7 (2)	15 (2)	16 (2)	23 (2)	24 (2)
5	4 (1)	5 (1)	13 (1)	14 (1)	21 (1)	22 (1)
6	2 (1)	3 (1)	11 (1)	12 (1)	19 (1)	20 (1)
7	4 (2)	5 (2)	13 (2)	14 (2)	21 (2)	22 (2)
8	2 (2)	3 (2)	11 (2)	12 (2)	19 (2)	20 (2)

Frame configurations

FR2AV 2U Frame for 12 Modules
 FR1AV 1U Frame for 6 Modules
 DTBAV Desk top Frame for 2 Modules




The 2U FR2AV frame will house up to 12 modules and dual power supplies. A hinged front panel gives access to the PSU and all modules. The universal frame wiring system allows any of the interface range of modules to be fitted in any position with the use of removable rear modules.

All modules can be plugged in and removed while the frame is powered without damage.


Rear Connectors

RM01 Connections

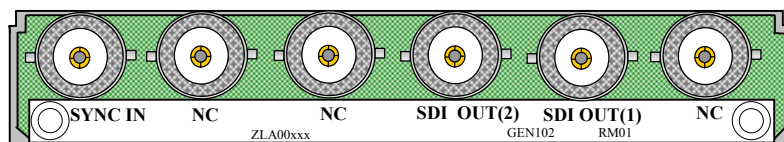


SDI OUT(1)	Serial Digital Output.
SDI OUT(2)	Serial Digital Output.
SYNC IN	External Sync Input

RM02 Connections

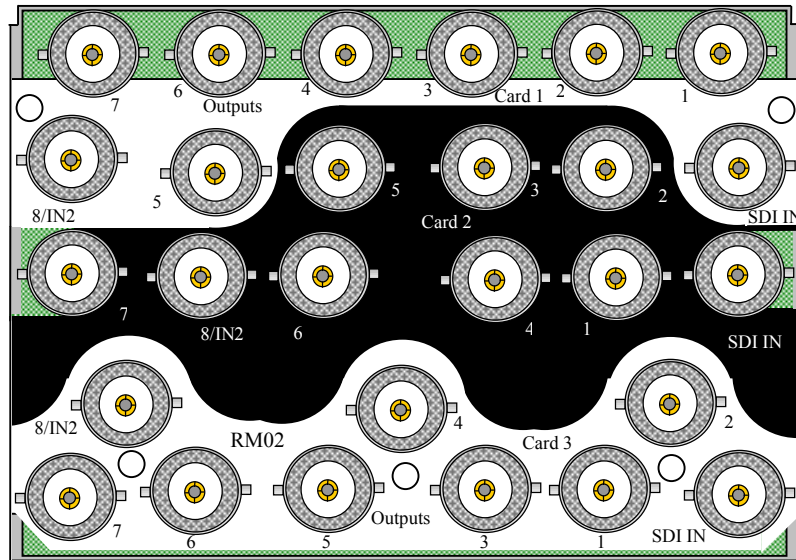


SDI IN	Serial Digital Input
1	Reclocked Serial Digital Output
2	Y/G Input
3	Y/G Input
4	U/B Input
5	V/R Input
6	V/R Input
7	External Sync Input
8/IN2	External Sync Input

RM18 Connections

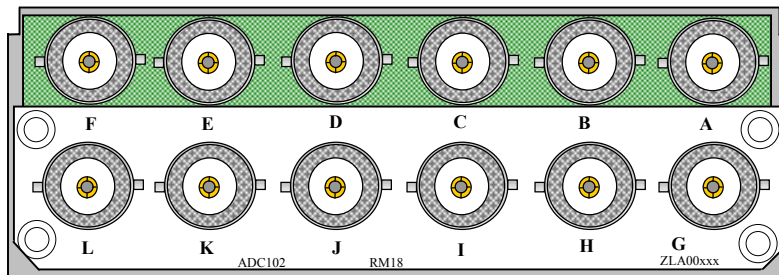

A	n/c
B	Serial Digital Output.
C	Serial Digital Output.
D	n/c
E	External Sync Input
F	External Sync Input
G	n/c
H	n/c
I	n/c
J	n/c
K	n/c
L	n/c


FR1-6 1U Frame for 6 Modules.
 FR2-12 2U Frame for 12 Modules.
 FR2-8 2U Frame for 6 Modules.

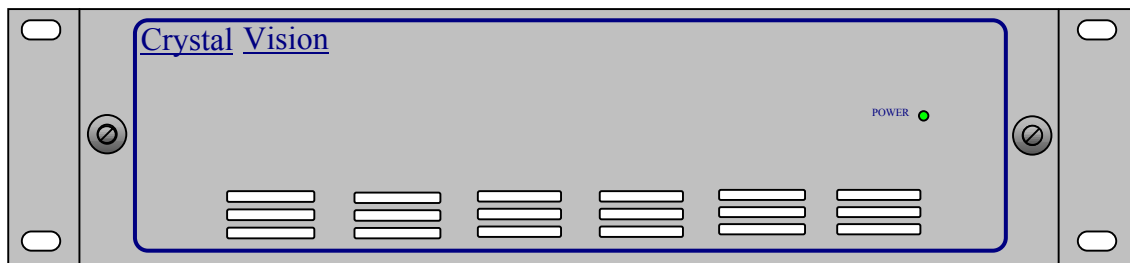

The FR1-6, FR2-8, FR2-12 frames for 6 & 12 modules include rear panel BNC connections and plug-in power supply. A hinged front panel gives access to the PSU and all modules. The universal frame wiring system allows any of the video interface range of modules to be fitted in any position. The 1U FR1-6 frame houses up to 6 modules and a single power supply. The 2U FR2-12 frame houses up to 12 modules and dual power supplies. The 2U FR2-8 frame houses 8 modules each with extra rear panel BNC connections.


The modules can be plugged in and removed while the frame is powered without damage.

FR1-6, FR2-12 & DTB-2 Rear Connections

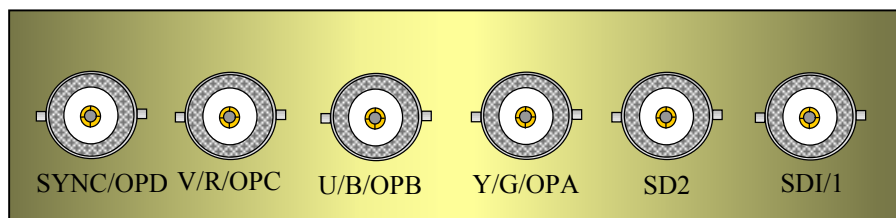

SDI/1	Serial Digital Output
SD2	Serial Digital Output.
SYNC/OPD	External Sync Input

FR2-8 Rear Connections

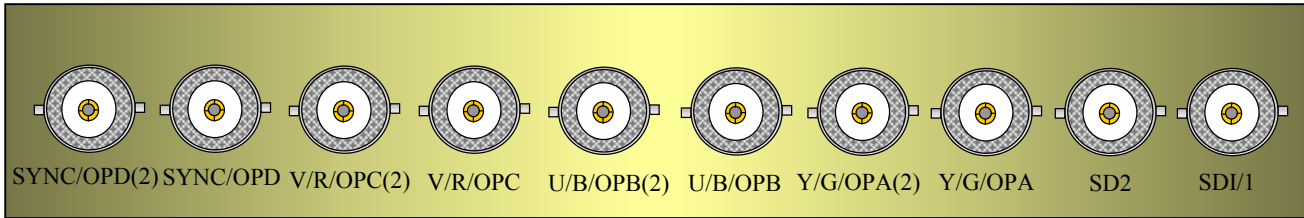

SDI/1	Serial Digital Output.
SD2	Serial Digital Output.
SYNC/OPD	External Sync Input
SYNC/OPD(2)	External Sync Loop-through